



 
G-GLIDE Instruction Manual




Please charge the product fully before using it for the first time.

(A full charge takes about 300 minutes. The device will not operate while charging.)
Be sure to read this instruction manual before use to ensure proper and safe usage.
Keep this manual in a safe place where you can refer to it at any time.

Contents

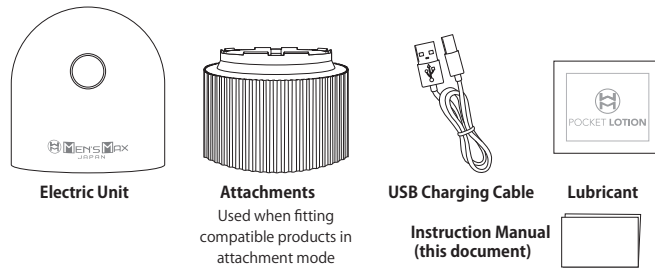

Names of Parts and Basic Operations

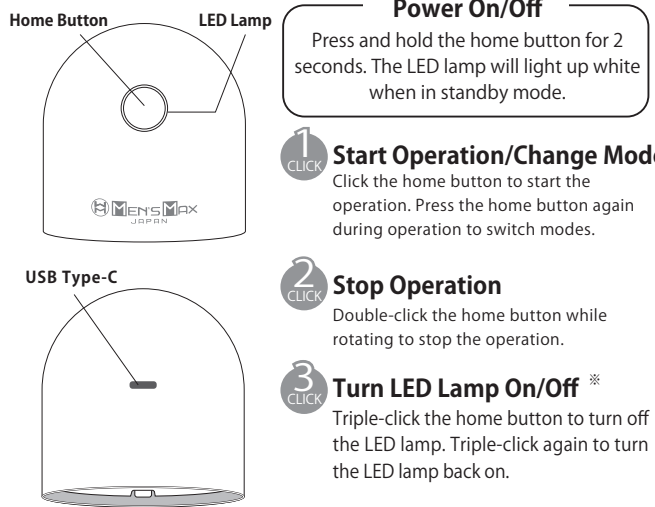 


Note: Light/Dark mode


Mode Switching

Press the home button during operation to switch between 9 different rotation modes.

Note: Rapid pressing may cause the mode switch to not respond.

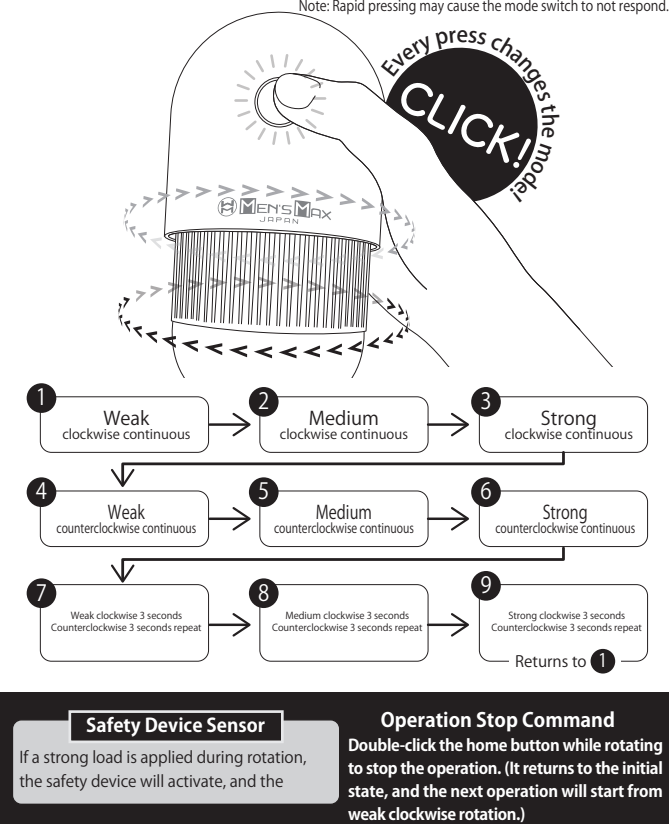


Installation Method (Normal Mode) for Grit

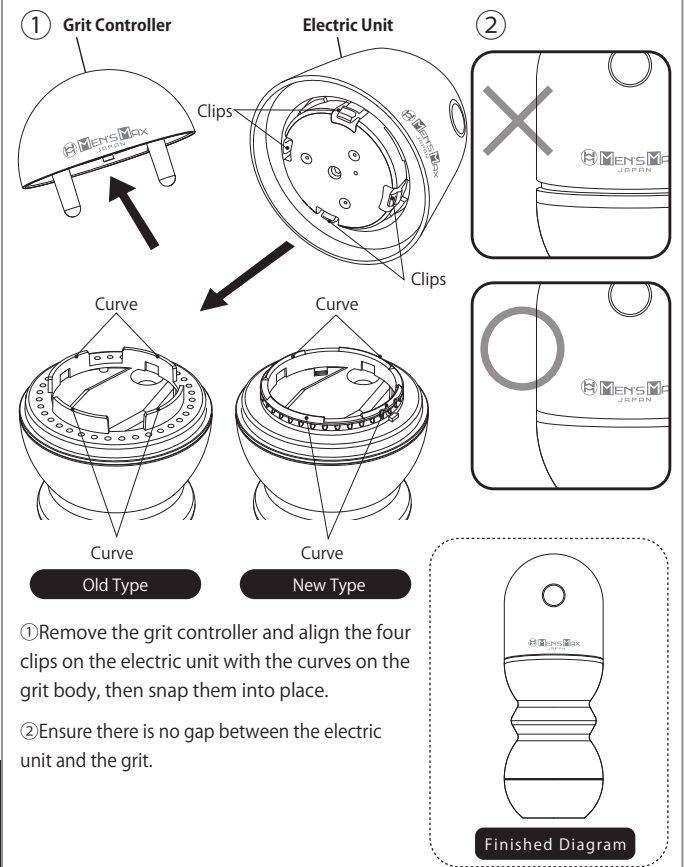


- Remove the grit controller and align the four clips on the electric unit with the curves on the grit body, then snap them into place.
- Ensure there is no gap between the electric unit and the grit.

Installation Method (Attachment Mode) for Compatible Products

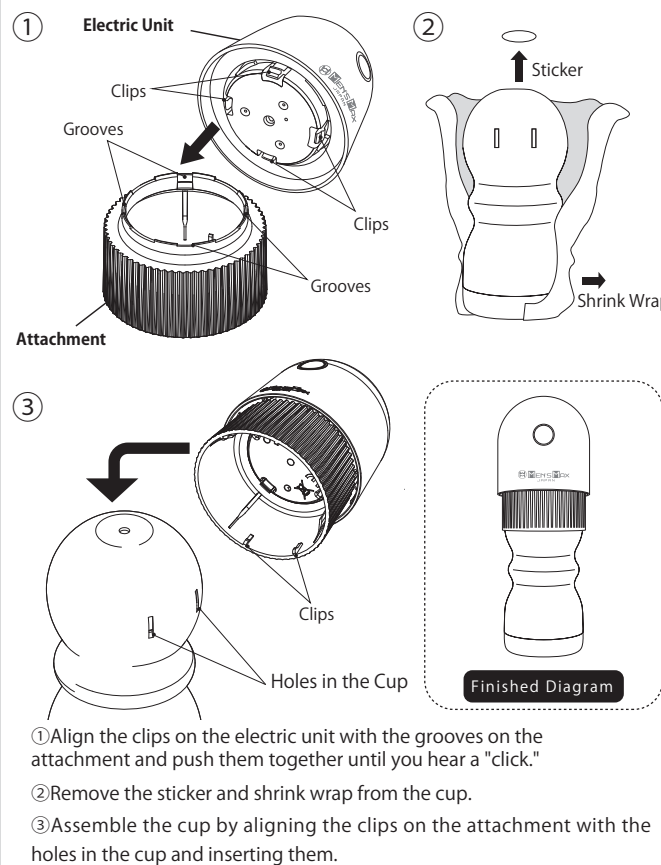

Removal Method


When removing the electric unit, make sure the main body cap is securely fastened. Be careful not to apply excessive pressure to the home button during removal.

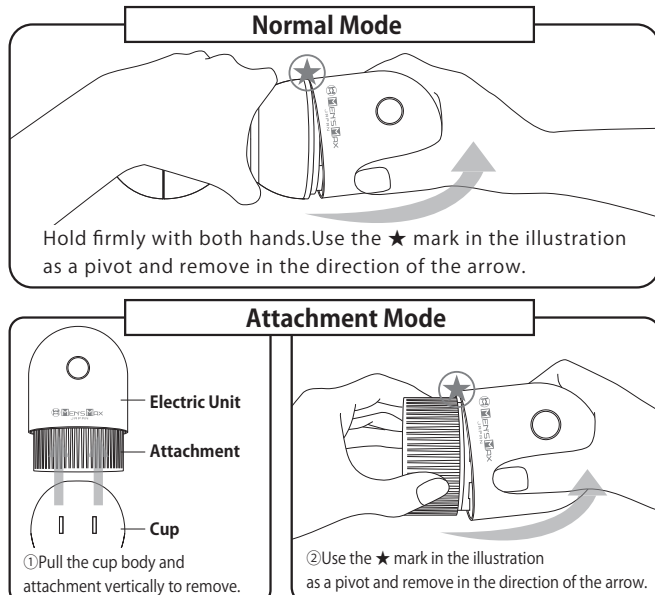

Product Name	G-GLIDE / MM-82-000
Operating Time	Approximately 200 minutes
Charging Time	With a computer or AC adapter: 300 minutes With a fast-charging compatible AC adapter: 240 minutes
Dimensions/Weight:	Height 8.7 cm x Width 8.7 cm x Depth 9 cm / 256 g USB Cable: Length 50 cm / Weight 9 g
Materials & Electronic Components:	PC, ABS/PCBA, Motor, Lithium-ion Battery (800mAh)

Charging Method

Note: If the battery level drops below a certain point, the LED lamp will light up red.

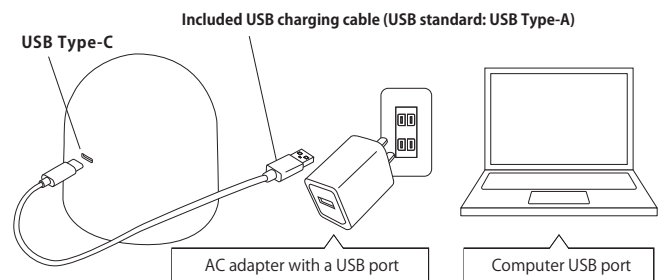

- Before connecting, ensure that the USB standard of the computer or AC adapter matches the standard of this product.
- Connect to a computer or a USB-charging capable AC adapter. If charging correctly, the LED lamp on the electric unit will blink orange. The device cannot be operated while charging.
- When charging is complete, the LED lamp will turn green.

- △ If the device is not used for a long period or has never been powered on after purchase, charge it once every six months to prevent battery degradation.
- △ Do not pull or bend the USB cable forcibly or place heavy objects on it, as this may cause damage.
- △ When removing the USB cable, hold the connector and pull it out slowly and horizontally without applying undue force to the connection part.
- △ Even with a fast-charging compatible AC adapter, rapid charging may not be possible due to compatibility with the USB cable or differences in product specifications.
- △ For safety reasons, disconnect the charging cable from the device when not charging.

- Precautions for Use
- Be cautious not to use the device when the interior is dry, as this will reduce comfort. If using for an extended period, prepare Lubricant and use it while refilling as needed.
 - Ensure that clothing, hair, fingers, etc., do not get caught in the cup or the device during use.
 - If you experience pain or discomfort, immediately turn off the power and stop using the device. Continuing to use the device may cause injury.
 - This product is not waterproof. Do not use it in areas where it may come into contact with water.
 - If the product becomes soiled with Lubricant or other substances, wipe it with a dry cloth or a



This product uses a lithium-ion battery, a valuable resource that can be recycled. When disposing of this product, please cooperate with recycling according to your local municipality's disposal methods.

Safety Precautions

- Do not use or store the product in direct sunlight or in high-temperature locations, as this may cause malfunction, overheating, or fire.
- Do not use thinners, benzine, alcohol, or hot water for cleaning, as this may cause discoloration or deformation.
- Keep out of reach of infants to prevent electric shock, injury, or accidents due to accidental ingestion.
- Do not hit, drop, step on, or place heavy objects on the product, as this may cause malfunction.
- Do not use the product if you are feeling unwell. This includes individuals using medical electronic devices (e.g., pacemakers), pregnant women, or anyone who may have health concerns.
- If you feel any abnormality in your body during use, stop using the product immediately and consult a doctor. Continuing use may result in accidents or health issues.
- Do not use the product while under the influence of alcohol or immediately after drinking, as this may cause accidents or injuries.
- Always turn off the power after use to prevent accidents or injuries.
- When charging this product, connect the USB cable correctly. Incorrect connections may cause malfunction, overheating, or fire.
- Do not charge the device while it is powered on, as this may cause malfunction, overheating, or fire.
- Do not forcibly bend or pull the USB cable, as this may cause injury or unexpected accidents.
- When disconnecting the USB cable, hold the connector and pull gently to avoid applying undue force.
- Do not modify, disassemble, or repair the product yourself, as this may cause fire or abnormal operation, leading to injury.
- Do not apply water to or wet the product.
- Do not use on areas with wounds, swelling, inflammation, or rashes.
- If you hear an abnormal sound or feel the product is not functioning correctly, stop using it immediately and turn off the power. Continuing use may result in accidents or injuries.
- Disconnect the USB cable from the power source when cleaning. Do not plug in or unplug with wet hands to prevent electric shock or burns.
- Do not use the product if the USB cable is damaged or if the USB terminal or plug is loose, as this may cause fire or electric shock.
- Do not grab the rotating product directly by hand, forcefully twist it in the opposite direction, or apply undue pressure to the motor. This may cause electric shock, short circuits, or malfunction.
- Do not modify, bring close to heat sources, or use while smoking, as this may cause electric shock or fire.
- This product is a medical device. We are not responsible for any damages if used for purposes other than intended. Use at your own risk.
- Regularly clean the USB terminal to prevent dust accumulation, which may cause insulation failure and fire.
- Always disconnect the USB cable from the power source when not charging, as dust and moisture can cause insulation failure and result in a fire hazard.
- Any damage resulting from not following the instructions in this manual is not the responsibility of the manufacturer.

Exchange Policy for Initial Defects

If there is an initial defect with the product, please contact us within one month of receiving the product. If we confirm the defect through an inspection, we will offer an exchange. Please note that products purchased through online auctions, flea markets, or second-hand shops are not covered under warranty. Additionally, please understand that exchanges may not be possible if the replacement product is out of stock.

Items Required for Exchange Procedure:

- The product (requests for exchange cannot be accepted if the product is lost, modified, disassembled, or disposed of).
- Proof of purchase (such as a reissued receipt, delivery note, or printed purchase history page from an online shopping site).



For inquiries regarding the product, please contact us here.
www.mensmax.jp



Instruction Manual



日本語



English



简体中文